





**APRIL 2021** 

# REDLITHIUM™ USB HEATED BASE LAYER KIT

L4HBLBLACK-301



#### FEATURES/SPECIFICATIONS



#### REDLITHIUM™ USB HEAT ON DEMAND

- 2 Heat settings: One touch LED controller
- Quick-heat function reaches selected temperature fast
- Heated chest and upper back zones
- Washer & dryer safe construction



#### **HEAT UP. LIMIT LAYERS.**

- Built for layering, with midweight construction to keep body warm and dry
- Fleece lined arms provide total body warmth
- Raglan sleeves and seamless shoulders provide mobility and comfort
- Piling resistant fabric



# REDLITHIUM™ USB 3.0AH BATTERY

- Provides up to 3 hours run time
- 3 Hours Low / 1.5 Hours High
- REDLITHIUM<sup>TM</sup> USB Charger/Controller, Heavy Duty Cord and Adaptor





### PRODUCT WALK AROUND




#### **SPECIFICATIONS**

#### **Choose Common Sizes to Maximise Sell-Through**

## **Sizing Forecast**

- S 11%
- M 21%
- L 33%
- XL 24%
- XXL 11%

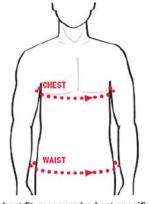

For best fit, measure body at specified points and match measurement to appropriate size range

**Regular** Fit: Comfortable with room to move (all men's jackets, hoodies, & vests)

SIZE	S	M	L	XL	XXL
CHEST	96.5 –	101.6 –	106.7 –	111.8 –	116.8 –
(cm)	101.6	106.7	111.8	116.8	121.9
WAIST	76.2 –	81.3 –	86.4 –	91.4 –	96.5 –
(cm)	81.3	86.4	91.4	96.5	101.6



#### FREQUENTLY ASKED QUESTIONS

#### How do you turn the REDLITHIUM™ USB Heated Base Layer on?

Press and hold the REDLITHIUM™ USB button for 2 seconds to turn on. After the base layer is on, each press will change between High and Low heat settings.

#### What do the button colors represent when changing the heat setting?

Red = High, Blue = Low

#### Does the Heated Base Layer come with a battery?

Yes, the Heated Base Layer Kit comes with a REDLITHIUM™ USB 3.0Ah Battery. It also ships with a USB Charger/Controller, Heavy Duty Cord, and Adaptor.

#### How do I find the correct size Heated Base Layer?

Sizing information can be found on packaging, on slide 4.